
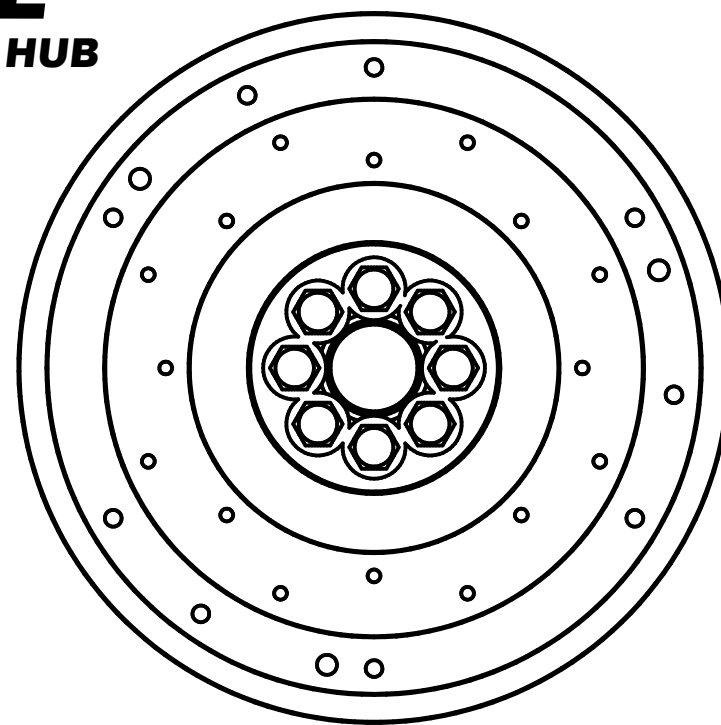


FW-K2F-AL

WITH STEEL BEARING HUB

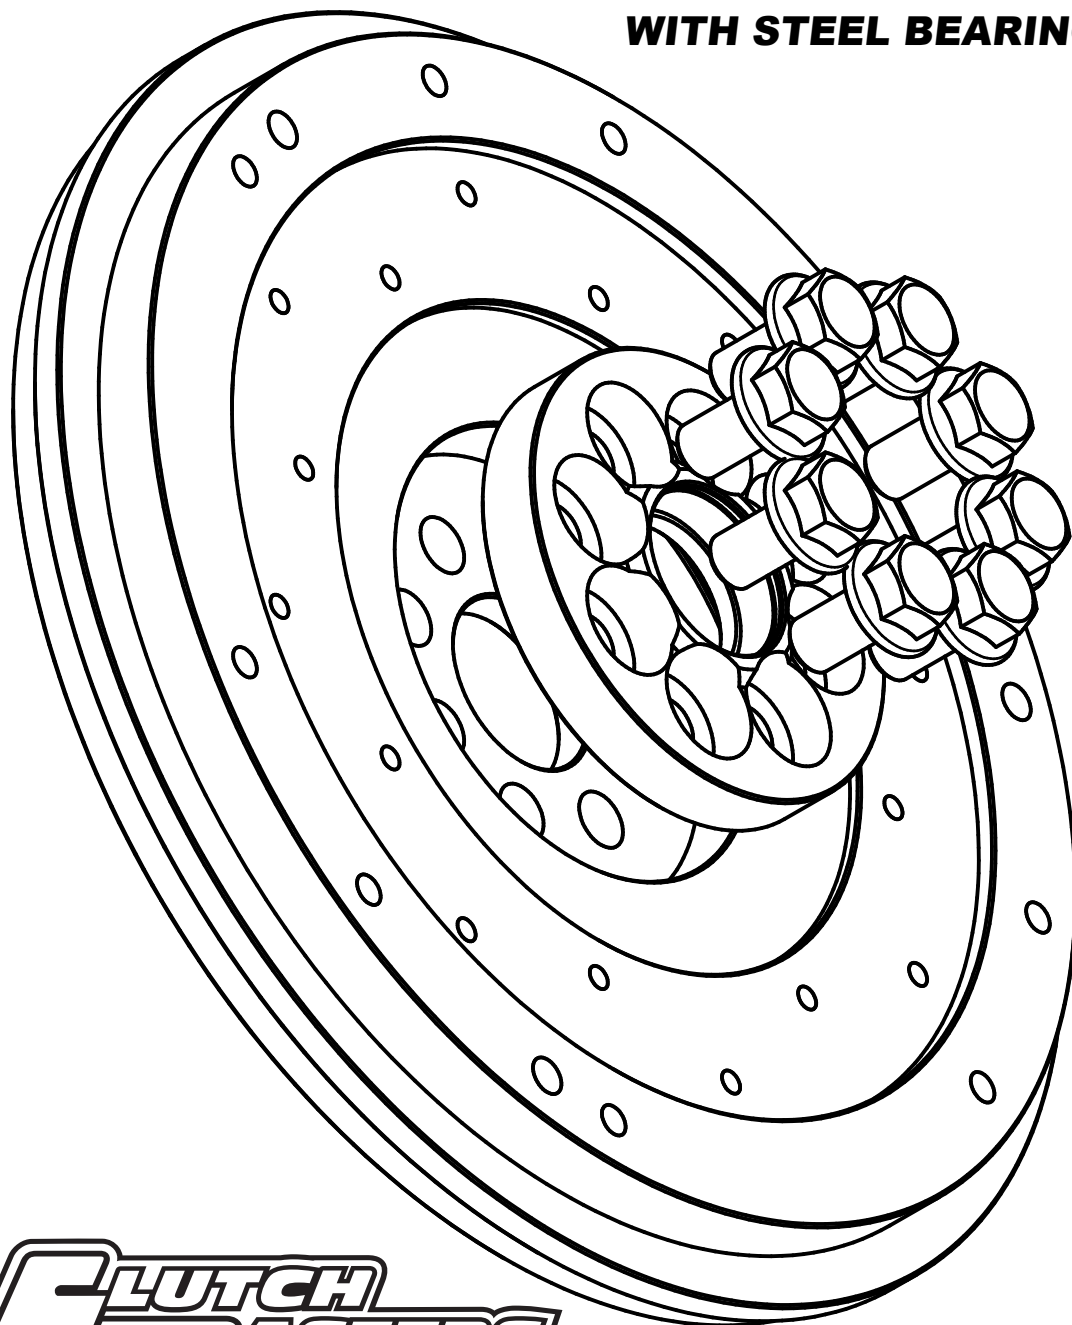

DO NOT INSTALL FLYWHEEL WITHOUT STEEL HUB!!!

The steel hub included with this flywheel acts as a torque plate and houses the pilot bearing. If not installed you risk severely damaging the aluminum flywheel and your transmission.

Please follow standard flywheel installation procedures and torque flywheel bolts according to manufacturers specifications.

**CLUTCH
MASTERS**

Property of Clutch Masters Inc
Aftmarket Flywheel and Clutch Systems, Designed and Manufactured in the USA

PHONE: 909-877-6800

EMAIL: sales@clutchmasters.com